





## 2018 BRP Can-Am Renegade 570/850/1000 Slip-on Exhaust (# 242-121)

Straightline Performance's BRP Renegade 570/850/1000 exhaust should be installed by a professional service installation center. Certified BRP dealers and Straightline certified performance centers are recommended for install and set-up. Straightline **highly recommends** the installation of a Dynojet Power commander PCV for optimum performance (part # 25-014). Email [tech@straightlineperformance.com](mailto:tech@straightlineperformance.com) for fuel and ignition programming maps, or check online at [www.straightlineperformance.com](http://www.straightlineperformance.com).

### Step 1. Complete removal of the rear fender and stock muffler.

Removing the stock muffler will take some patience. Step one is complete removal of the rear fender.



- Unbolt the 2 side bolts holding the rear fender as shown in picture #1. This will need to be done on both sides.
- Unbolt the 4 tie down holders on the top of the rear fender (Picture #2).
- Unbolt the 4 rear bolts from the fender and then remove the entire fender (Picture #4).
- Unbolt the rear bumper from the chassis and remove (Picture #3).
- Last, the 2 bolts on the lower bumper. You do not need to completely remove the bumper, just enough to get the muffler installed.

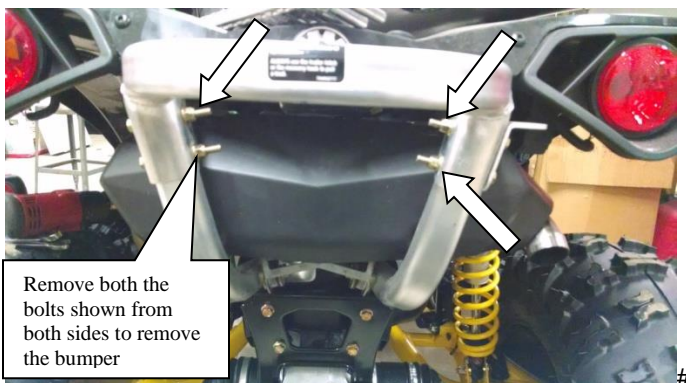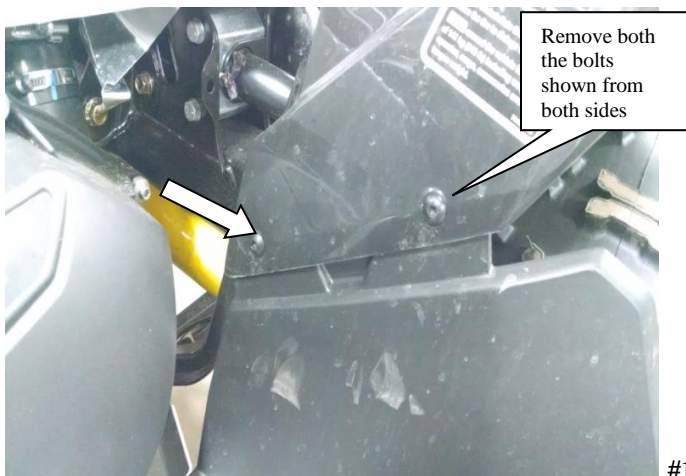

# STRAIGHTLINE PERFORMANCE

## Step2. Straightline Slip-On Installation.

1. Unbolt the 2 bolts on the top of the frame that bolt the bumper support to the chassis as shown in picture #5.
2. Install the supplied graphoil in the mid pipe of the Straightline muffler and install on the stock head pipe.
3. Install the Straightline muffler into place using the supplied clamp. Leave clamp loose until muffler canister is in place and mounting bolts are started.
4. Lift up and over the rear chassis brace to rest the muffler bracket onto the rear bumper. The top 2 holes will line up for mounting. These are 2 of the holes that the rear fender tie straps mount down to.

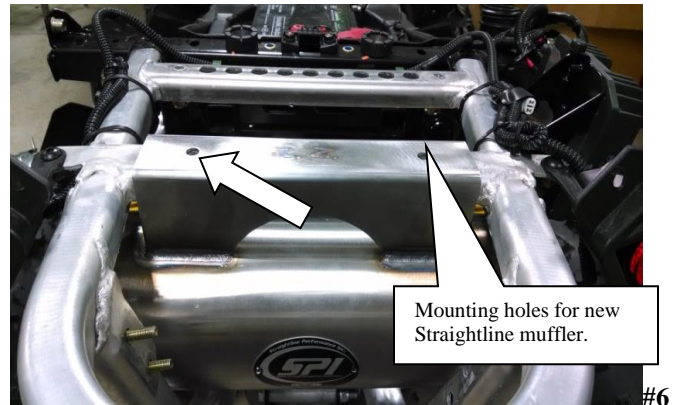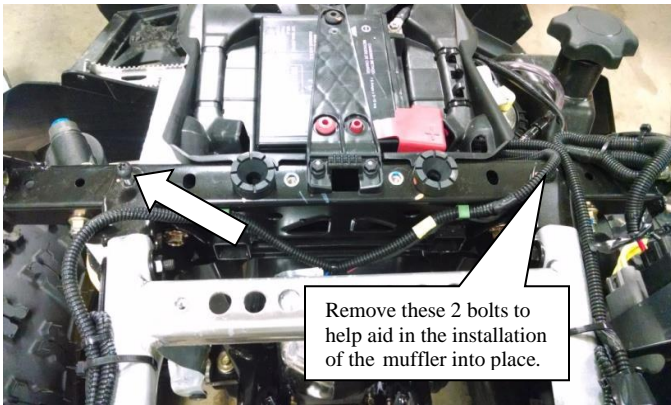

## Step3. Assembly

1. Re-install the 2 bolts holding the rear bumper back on in picture #5.
2. Re-install the rear bumper and tighten all the bolts.
3. Re-install the rear fender and install the tie down bolts that install mount through and hold the new Straightline Pipe mounting. These are 2 of the holes that the rear fender tie straps mount down too.







## BRP Can-Am Renegade 570/850/1000 Exhaust (242-121)

1	IT-242-121 Renegade Slip-On
1	707600430 Graphoil
2	94100-0188 Clamp
1	Instructions
1	Sticker
Checked by	

Technical questions can be answered at [tech@straightlineperformance.com](mailto:tech@straightlineperformance.com)



You Tube



Facebook @ straightlineperformanceinc

Youtube @ straightlineperfinc

Twitter @ straightlineperf